

RF Connector Identification Chart

 <p>BNC Plug (Male)</p>	 <p>RP-BNC Plug (Male)</p>	 <p>RP-BNC Jack (Female)</p>	
 <p>N-Male</p>	 <p>N Jack (Female)</p>	 <p>N Jack (Female) Bulkhead</p>	
 <p>SMA Plug (Male)</p>	 <p>SMA Jack (Female)</p>	 <p>RP-SMA Plug (Male)</p>	 <p>RP-SMA Jack (Female)</p>
 <p>RP-SMA Jack (Female) Bulkhead</p>			
 <p>TNC Plug (Male)</p>	 <p>TNC Jack (Female)</p>	 <p>RP-TNC Plug (Male)</p>	 <p>RP-TNC Jack (Female)</p>

			
FME Plug (Male)	FME Jack (Female)	SMB Plug	
			
MC Card Plug (Male)	MCX Plug (Male)	MMCX	RP-MMCX
			
UHF Plug (Male)	Mini-UHF Plug (Male)	Mini-UHF Jack (Female)	
			
U.FL			



Suite 137-319
 931 W. 75th Street
 Naperville, IL 60565 USA
 Tel: 630.428.3108
 Fax: 630.428.1575
 sales@air802.com

2102 Av Fermin Vivaceta
 Independencia
 Santiago, Chile
 Tel: 562.455.0975
 Fax: 562.455.0976
 ventas@air802.com